

## **READ THIS BEFORE YOU USE YOUR RC1200 HOSE REEL.**

### **RC1200K HOTWASH HOSE REEL USER INSTRUCTIONS.**

The RC1200 series HotWash hose reel with spray gun is a complete wash down system suitable for commercial kitchens, restaurants, butchers and supermarket Deli's.

This guide is designed to help you get the most out of your AK Reels RC1200K system.

### **ALWAYS**

- Leave the water turned off until the hose is required.
- **use** your spare hand (the one without the spray in it) to pull the hose out of the reel.
- Turn off the water and release the water in the hose before trying to rewind the hose.
- Always hold the spray open and keep the spray in hand whilst the hose is rewinding.
- Mount the reel at waist height for ease of use.
- If mounting high on a wall, invert the reel so that the hose return mouth is pointing down. This makes it easier to get the hose out and for the hose to return. See below.
- Use the overhead bracket (optional extra) if the reel is to be mounted more than 2M off the ground. See below.
- Clean the hose of grease and residue from washing up by using a clean cloth around the hose on its return at least once a month.



These simple steps above will help you keep your RC1200K system working for longer.

### **DO NOT**

- Leave the water turned on. This causes the hose to expand and become stiff, causing the hose not to retract correctly.
- Let the hose rewind on its own. The spray gun will be damaged and staff safety compromised.
- **NEVER** pull the hose out of the reel by the spray gun. Use your spare hand to pull on the hose. Bending the hose at the spray will cut the hose, causing “blistering” or at worst or destroy it.